

## Red Laser Micro Dot

ITEM: HD03

# INSTRUCTIONS

**NOTE: PLEASE FOLLOW ALL OF THE DIRECTIONS IN THIS MANUAL CAREFULLY.**

**CAUTIONS: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE LISTED HERE MAY RESULT IN DAMAGE OF YOUR RED DOT SIGHT AND FIREARMS.**


**KEEP OUT OF THE REACH OF CHILDREN.**

**FOR ADULT USE ONLY.**

### **Statements:**

The product has been carefully checked and tested in our factory, please check carefully whether the product appearance is damaged caused by transport and whether the accessories are complete before using the product. The accessories include: 1.One piece of red dot sight with cover(to protect your red dot sight while not in use); 2.One

piece of Allen wrench; 3.One piece of screwdriver; 4.One piece of CR2032 battery; 5.One piece of adjustment wheel; 6.One piece of lens cleaning wiper; 7. Instruction manual .

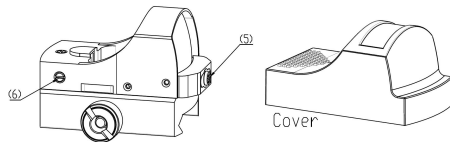

Adjustment Wheel

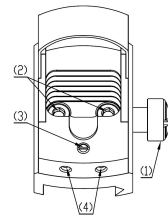


Figure 1

### **SPECIFICATIONS:**

- Model: HD03
- Class 1 product
- Output power: <math><0.39\text{mW}</math>
- Wavelength: 650nm
- Dot Size: 2MOA
- Objective Lens:22.5mm\*18mm
- Lens Coating:Multi Coated
- Length: 2"
- Height : 1.4"(Mount incl.)
- Width : 1.6"(Screw incl.)
- Weight: 2.2 oz. (with Battery)
- Reticle : 4 Levels Red Dot
- Battery: 1pc CR2032 Lithium Battery
- Material: Aircraft aluminum 6061-T6
- Finish: Anodic oxidation/ black
- Working Temperature:-20°C ~ +60°C
- Storage Temperature:-20°C ~ +60°C
- Battery life:approx 6-8 days
- Place of Origin: China (Mainland)

**Steps:**

A. Installing the red dot sight:

**CAUTION: BEFORE BEGINNING INSTALLATION OF YOUR RED DOT SIGHT BE SURE THAT THE FIREARM IS UNLOADED. ALWAYS PRACTICE SAFE FIREARMS HANDLING PROCEDURES.**

Loosen the master screw(1) on the side of the red dot sight, insert the red dot sight into the mount of your firearm by tightening the master screw(1), please pay attention, after tightening the master screw(1) by hand, you must tighten it again with allen wrench, otherwise, the red dot sight can easily to fall off from your gun.

B. Zeroing:

**WHEN OPERATING ANY TYPE OF FIREARM ALWAYS USE PROPER EYE AND EAR**

**PROTECTION.BE SURE TO USE YOUR FIREARM IN AN AREA THAT IS PERMISSABLE UNDER LOCAL, STATE, AND FEDERAL LAW.**

**CAUTION: LOOKING DIRECTLY AT THE SUN THROUGH THIS UNIT MAY RESULT IN**

**PERMANENT EYE DAMAGE.**

Adjustment screws(3)&(6) are for the adjustment of elevation & windage. Loosen or fasten back two screws(4) before or after adjustment, which is for lock purpose.

C. ON/OFF Button:

Press ON/OFF button(5) till it clicks, the red dot sight is on. Push button switch provides varying intensities, in total 4 levels. The red dot sight will be turned off after the 5<sup>th</sup> pressing.

If you want to turn off the red dot sight at anytime, just continuous press ON/OFF for 3 seconds.

D. Exchange the battery:

Remove the two screws(2) on the top of sight, turn the sight upside down and separate the two halves, remove the old

battery, replace a new battery, please make sure the positive end “+” of the battery faces towards you, otherwise it could damage your product. At last, tighten the two screws(2).

Following images - Figure 2 is for your reference to install the battery.

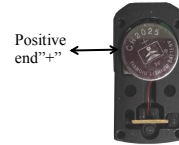


Figure 2

**Note:** While not in use be sure that the unit is covered and ON/OFF button is off to preserve battery life.

**SPECIAL NOTE:** THIS UNIT WILL ONLY WORK UNDER THE TEMPERATURES LISTED ABOVE. THE UNIT WILL NOT WORK IN EXTREME COLD OR EXTREME HEAT. IF YOU WON'T USE IT FOR A LONG TIME, PLEASE REMOVE THE BATTERY.

**Note:** If you are not sure of any of the procedures in this manual, always seek the help of a qualified professional to avoid damage to your laser device and your firearm.

**CAUTION - LASER LIGHT IS BRIGHT AND BLINDING - DO NOT SHINE AT AIRCRAFT OR VEHICLES AT ANY DISTANCE.**