




## *LED Flashlight Green / Blue Laser Grip*

Please read this manual carefully before use and keep it for future reference.

### Features

- LED Type: CREE XM-L2 Max 1000 lumens Output
- Outputs: L-150lm, M-350lm, H-1000lm, Strobe-1000lm
- Quick activation of strobe by pressing function key
- Low, Medium, High Modes and Strobe mode
- All-Aluminum Ergonomic Tactical Grip
- Weight: 368.5g/1299oz
- Max runtime: 50 hours; Waterproof: IPX-6 standard
- Operating temperature: -20°C -- +50°C
- Precision **Blue** and **Green** laser sight
- Batteries: 2x CR123 or 1x 18650 rechargeable battery

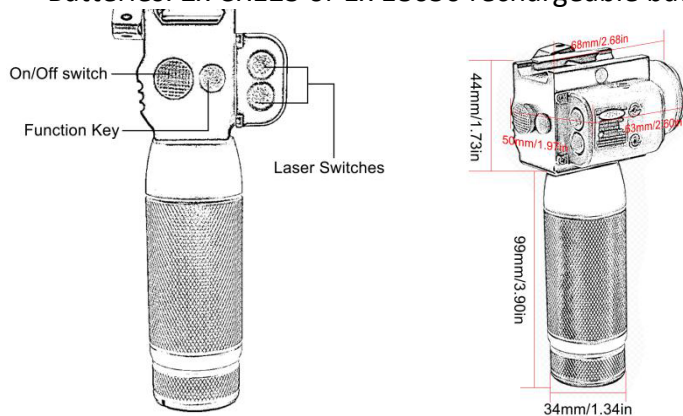

### How To Sight in Laser

- (1) Windage adjustment screw is located on the side of the laser module. With the screwdriver (included), turn the Windage screw clockwise or counterclockwise to adjust Windage.
- (2) Elevation adjustment screw is located on the bottom and top of the laser module. With the screwdriver, turn the Elevation screw clockwise or counterclockwise to adjust elevation.

### How To Operate Flashlight

- (1) When the light is OFF, press the Function Key to activate strobe light.
- (2) When the light is ON, press the Function Key to change light outputs from low, medium, high.
- (3) When the light is in on position, press and hold the Function Key at the same to have Strobe light.

### If your firearm has the following conditions, this unit cannot be installed:

1. No Rail
2. No Picatinny
3. No Slot
4. Clear space less than 0.827 inch /21MM