 




OSPREY GLOBAL

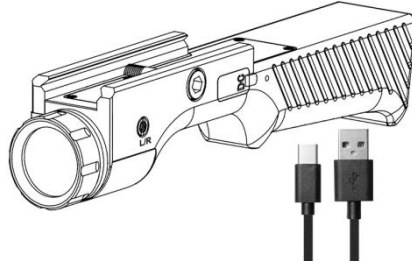

Low Profile Rechargeable 1000 Lumen Flashlight and Green Laser

 
User Manual

Model: GRN-OSP-1000LLC

Thank you for your purchase. Please read this manual carefully before use and keep it for future reference!

Features

- LED: CREE XPL2 10W powered by rechargeable battery
- Press the light switch to turn the light on or off. Quickly press the switch twice to switch between brightness levels (Low to High), press the switch up to 3s to strobe.
- Max Brightness: 1000 lm Runtime: 2.5-3 hours
- Minimum Brightness: 150 lm Runtime: 5.5 hours
- Operation Voltage: 2-4.2V
- Robust anodized aircraft grade aluminum
- IPX6 water-resistance, impact resistance and shock-resistance
- Operating temperature: -20~+50°C
- Green Laser: 515-532nm, laser power <5mW
- Runtime Green laser: 30-35 hours
- Static power consumption: <20uA
- Charging time: 2.5 hours
- Lifetime warranty
- When the battery power is less than 5%, it will automatically shut down (turn off the light and laser) to prevent battery damage. After automatic shutdown, such as pressing the power on button again to turn on the battery, indicator (red light) will be 0.2s / each time, flashing for 6 seconds to indicate a lack of power.
- When charging, the battery power indicator will be red, and when fully charged, the red indicator light will become green.

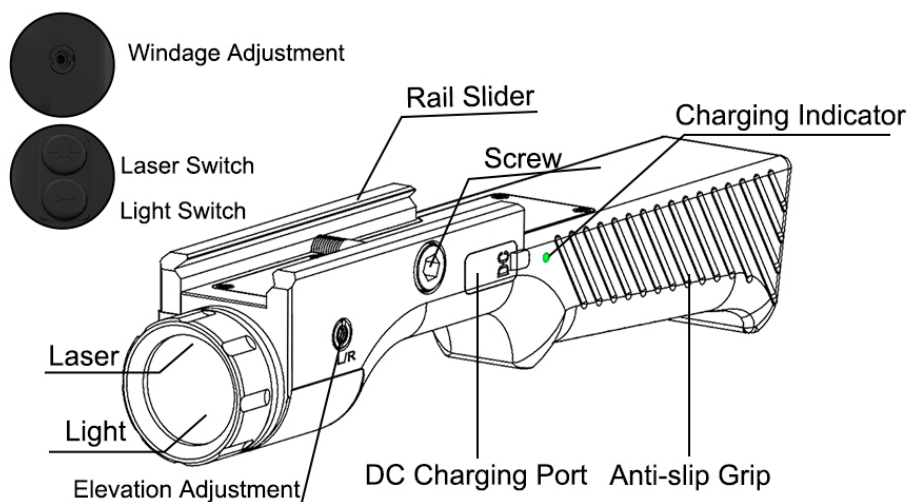


Specification

Max Brightness	CREE LED, 1000 lm
Low Brightness	150 lm
Green Laser Run Time	30-35 hours
Max Brightness Run Time	2.5-3 hours (1000 lm)
Minimum Brightness Light Run Time	5.5 hours (150 lum)
Laser Wavelength	515-532nm, laser power <5mW
Battery Type	18500 (2000MA) lithium polymer battery (Rechargeable)
Light Distance	200 meters/656 ft at night
Charging Time	2.5 hours
Static Power Consumption	<20uA
Weight	8.35oz

Rechargeable Battery

 Directly charge the battery with the Type-C charging cable in the package; during the charging process, the charging indicator is red, and when it is fully charged, it becomes green.

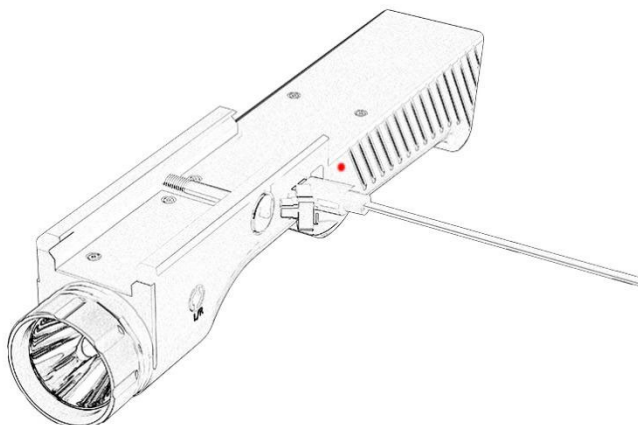


Way to Install

- This light can be mounted on standard Picatinny and Weaver rail with Screw Slot.
- Choose one of the holes for the screw to get forward/backward location.
- Loosen the mounting screw and push it, the rail will be extended, fix the screw into rail's groove.
- Tighten the screw to finish the installation.

The following conditions will prevent unit from being installed:

 1. No Rail
2. No Picatinny
3. No Slot
4. Clear Space' less than 4.2 inches /105MM

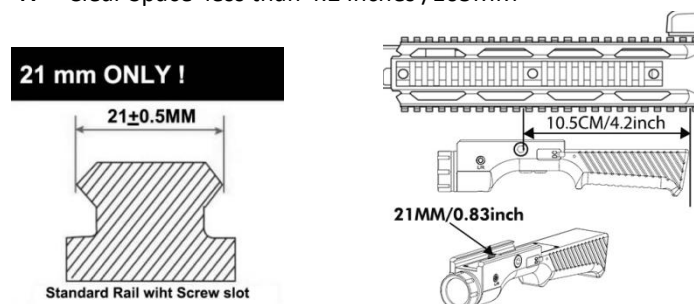

Two Modes for Both Laser and Light

- Steady Flashlight: Press once the light button.
- Brightness modes: Quickly press the switch twice to change between brightness levels (Low Brightness - High Brightness)
- Strobe Flashlight: Press and hold the light button for 3s to change.
- Steady Laser: Press once the Laser button.
- Strobe Laser: Press and hold the Laser button for 3s to change.

Package contents

- (1) 1 * 1000 Lumen Laser Light
- (2) 1 * Paper Packaging Box
- (3) 1 * Type-C Cable
- (4) 2 * Mounting Screw
- (5) 1 * Mounting Picatinny Rail
- (6) 1 * Installed Wrench
- (7) 1 * Mounting Wrench
- (8) 1 * Zeroing Wrench
- (9) 1 * (2000MA) Battery

ATTN: If your equipment does not have Picatinny Rail, package (6) and (7) (8) will help you solve this problem, just install (6) Picatinny Rail on top of your equipment and tighten it with (4) (5) screws.



WARNING:

1. Before beginning the adjustment process, ensure that your weapon is unloaded and there is no ammunition in the chamber.
2. Make sure to always keep your weapon pointed in a safe direction away from others and never place your finger on the trigger.
3. Never look directly into the light, direct viewing of the light is hazardous to the eyes.
4. Do not allow children to use light unless under adult supervision.



Light is forbidden to shoot into eyes and/or skin directly; blindness or burning could be caused.